 


Steps for unlocking the Election Compact Flash Card

1. Insert the election compact flash card into the AutoMark unit.
2. Insert key into the AutoMark and turn to the test position.



3. Select the "Unlock Flash Card" option from the menu screen.

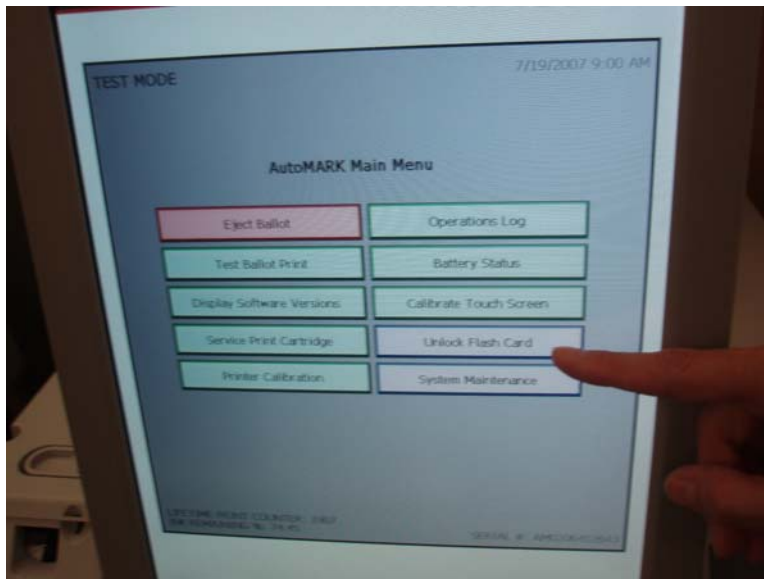

 
4. Touch the white box in the center of the screen.




5. Enter the code sent by the Bureau of Elections. **Warning: If you don't enter the security code at this step, you will get the error message: Alert! A problem has occurred. Please notify an election official. Files may have been tampered with or wrong access code.**



6. Touch the "Done" button.

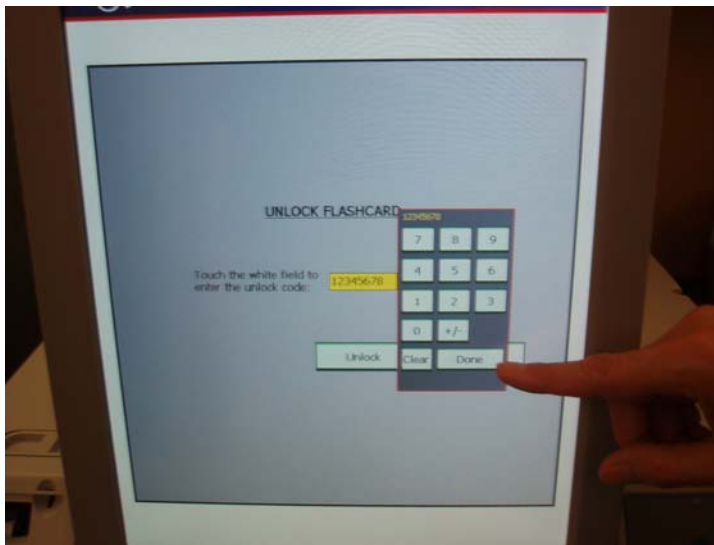

7. Touch the unlock button.

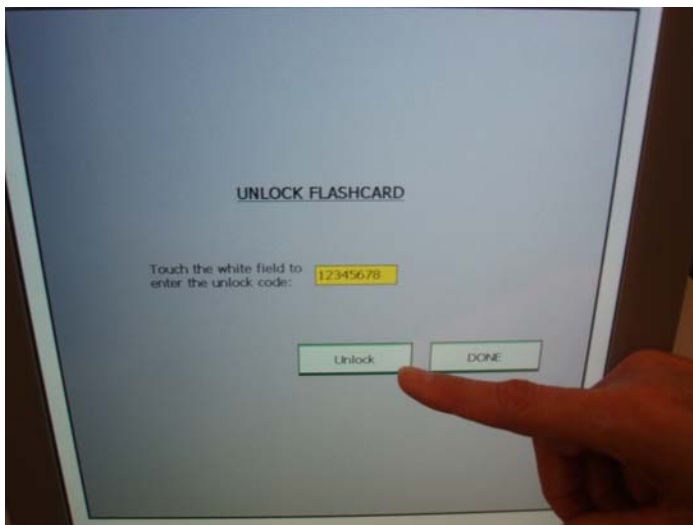

8. When red text tells you the card has been unlocked, touch the done button.



9. Turn the key to the on position.